

Take a closer look



4 Buttons

- **Power On/Off**
- **WiFi Button**
- **Shot Button**
- **Reset Button**

3 Leds:

- **Power On/Off – (White Light)**
- **Wi-Fi – (White Light)**
- **Circular – (Red Light)**

Wi-Fi Password:
1234567890

iOS App :

<https://apps.apple.com/it/app/cleep-pro-camera/id1565935816?l=en>

Android App:

<https://play.google.com/store/apps/details?id=com.cleepwearable.mobilecam>

How to connect to the App:

https://youtu.be/ra7r-c_ILNc

Power On

Action: Press Power button for **1 second long pressure to turn on.**

Vibration Feedback: 1 soft vibration (0.5 s) “ _____ ”

Power OFF

Action: Press Power button for **4 seconds long pressure.**

Led Feedback: Leds are off.

Vibration Feedback: 3 soft vibration ” ____ _ ”

Switch Photo/Video mode

Action: Press Power button once to switch between photo and video mode.

Video Mode: White led is fixed.

Photo Mode: white led blinking.

Vibration feedback: 1 soft vibration while switching (0.5 s) “ _____ ”

Quick Stories (15 seconds video):

Action: short press shot button and release to record 15sec video. It automatically stop after 15sec.

Led Feedback: red light blink while recording.

Vibration Feedback: 1 soft vibration (0.5 s) when starting recording

“ ___ ”

2 soft vibration when stopping recording “ ___ ___ ”

How to Shot Long Video

Action: Press shot button for **2 seconds** and release to start recording video. Short press and release to stop recording.

Led Feedback: red light blink while recording.

Vibration feedback: short vibration when start recording “ ___ ”

2 soft vibrations when stop recording ” ___ ___ ”

Shot Photos

Action: short press shot button to shoot a photo.

Led Feedback: Circular Led light blinks while recording.

Vibration Feedback: 1 soft vibration (0.5 s) when photo is shotted recording “ ___ ”

Power On Wi-Fi:

Action: Press the Wi-Fi button for **2 seconds to turn on Wi-Fi.**

Led Feedback: Wi-Fi Led blink.

Vibration Feedback: 1 soft vibration (0.5 s) “ ___ ”

Wi-Fi connected:

Led Feedback: white led fixed.

Power Off Wi-Fi

Action: Press the Wi-Fi button for **2 seconds to turn off Wi-Fi.**

Led Feedback Wi-Fi Led is off.

Vibration Feedback: 1 soft vibration (0.5 s) “__”

Low Battery Alert

Power On/off led blinks fast.

How to reset

Press Reset Button to reset the device.

How to recharge

Insert USB-C cable provided to electrical outlet or pc and charge fr 50-60 minutes

For any technical issue or problem write us an email to:

info@cleepwearable.com

Enjoy your Cleep Pro!